

<https://mymopar.com/resource-library/MOPAR> FRONT DOOR
REPLACEMENT

REPRINTED FROM THE FACTORY SERVICE MANUAL

FRONT DOORS, ALL MODELS

REMOVAL

With door in wide open position, place a jack, with a block of wood or pad on lifting plate of jack, as near hinge as possible. (This will hold the weight of door as hinge bolts are loosened.)

Remove door interior trim and hardware.

Scribe a line around upper and lower hinge plates on door panel.

Remove hinge attaching screws from door and remove door.

INSTALLATION

With door inner hardware installed, place door in position in door opening, supported by a padded jack.

Locate door hinge plates on door panel and install hinge attaching screws finger tight only.

Adjust jack to align hinge plate scribe marks and tighten attaching screws.

Complete door aligning procedure and install door interior trim and hardware.