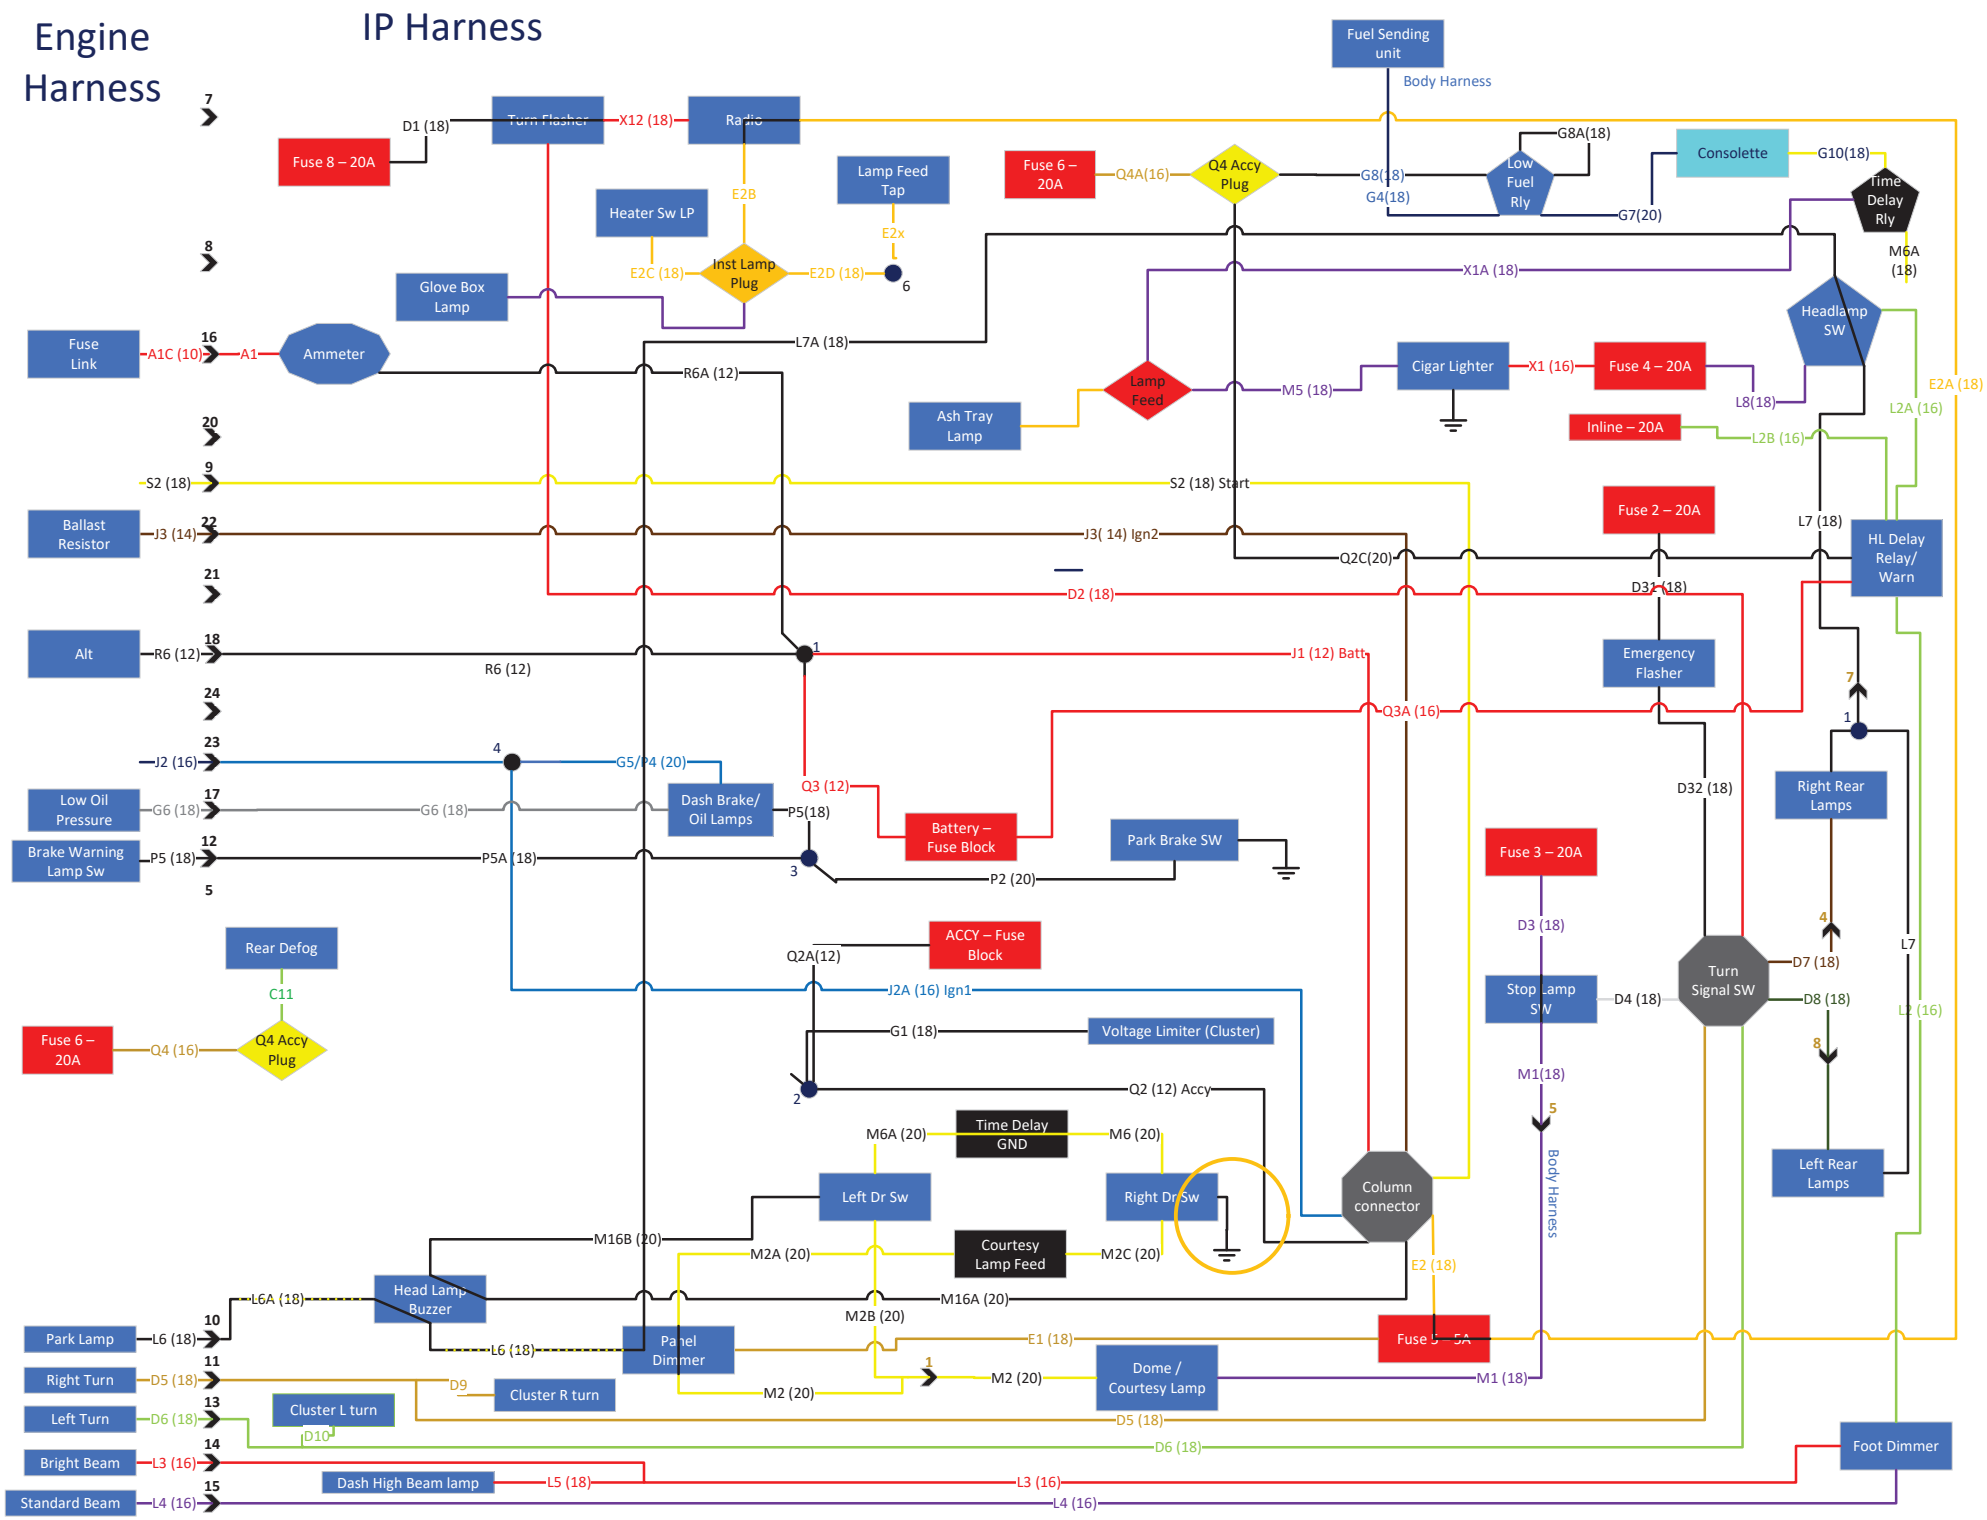
Engine Harness
IP Harness
Fuel Sending unit
Body Harness
Turn Flasher
Radio
Fuse 8 – 20A
D1 (18)
X12 (18)
Lamp Feed Tap
Fuse 6 – 20A
Q4A(16)
Q4 Accy Plug
G8(18)
G4(18)
Low Fuel Rly
G8A(18)
G7(20)
Consolette
G10(18)
Time Delay Rly
M6A (18)
Heater Sw LP
E2B
E2x
E2C (18)
Inst Lamp Plug
E2D (18)
Glove Box Lamp
X1A (18)
Headlamp SW
Fuse Link
A1C (10)
A1
Ammeter
L7A (18)
R6A (12)
Lamp Feed
M5 (18)
Cigar Lighter
X1 (16)
Fuse 4 – 20A
L8(18)
E2A (18)
L2A (16)
Ash Tray Lamp
Inline – 20A
L2B (16)
S2 (18)
S2 (18) Start
Ballast Resistor
J3 (14)
J3(14) Ign2
Fuse 2 – 20A
L7 (18)
HL Delay Relay/ Warn
Q2C(20)
D2 (18)
D31 (18)
Alt
R6 (12)
J1 (12) Batt
Emergency Flasher
Q3A (16)
J2 (16)
G5/P4 (20)
Low Oil Pressure
G6 (18)
Dash Brake/ Oil Lamps
P5(18)
Q3 (12)
Battery – Fuse Block
Park Brake SW
D32 (18)
Right Rear Lamps
Brake Warning Lamp Sw
P5 (18)
P5A (18)
P2 (20)
Fuse 3 – 20A
Rear Defog
C11
ACCY – Fuse Block
Q2A(12)
D3 (18)
Stop Lamp SW
D4 (18)
Turn Signal SW
D7 (18)
D8 (18)
L7
J2A (16) Ign1
Fuse 6 – 20A
Q4 (16)
Q4 Accy Plug
G1 (18)
Voltage Limiter (Cluster)
L2 (16)
M1(18)
Q2 (12) Accy
M6A (20)
Time Delay GND
M6 (20)
Left Rear Lamps
Left Dr Sw
Right Dr Sw
Column connector
Body Harness
M16B (20)
M2A (20)
Courtesy Lamp Feed
M2C (20)
E2 (18)
L6A (18)
Head Lamp Buzzer
M16A (20)
M2B (20)
Park Lamp
L6 (18)
Panel Dimmer
E1 (18)
Fuse 5 – 5A
Right Turn
D5 (18)
D9
Cluster R turn
M2 (20)
Dome / Courtesy Lamp
M1 (18)
Left Turn
D6 (18)
Cluster L turn
D10
Bright Beam
L3 (16)
Foot Dimmer
Dash High Beam lamp
L5 (18)
Standard Beam
L4 (16)